

Pickleball Frame and Net Requirements:

Net Height Requirements 36" at ends and 34" in center

Before moving the nets make sure you unlock all 5 wheels. Moving the net without unlocking the wheels causes damage to the frame.

Once you have moved the net to play and prior to the start of play, lock the wheels.

The frame is assembled and DOES NOT need to be disassembled after use. The new frame is rust resistant and may remain out.

After playing, the net should be moved close to the fence and secured by locking all wheels. If you do not lock the wheels, strong winds may move the net causing damage to the frame and net.

Secure the box with the bolt and nut, this prevents the lid from opening during high winds.

Thank you for taking care of the equipment.